

LOUMA - technical notices for video

For Remote Head – configuration we will need :

- Camera
- Camera Baseplate
- Triax cable type: A2 with connector Lemo 3T or Fischer 1051 between Camera and Broadcast truck
- Lens (zoom)
- Zoom servo & command / Canon or Fujinon
- Focus servo & command / Canon or Fujinon

The Iris and the camera power supply is controlled by the Broadcast truck via the Triax link

For the Console, what we need :

Tally :

- We need Tally wire with Bnc, XLR 3 or Banana jack (Voltage or contact).

Intercom :

- Universal interface for 4 wire systems with XLR 3 connectors at line level.

Video :

- 2x BNC wires (Program & Remote Head camera).

Power supply :

- Our Louma crane needs a 220 / 240V AC 3 Amp (~1 KW) with Broadcast truck potential.